


1/2" SQ EAST WIND L.F.
WIND TO BEND AROUND TIP.

HEAVY POINT OF BUREAU

1/2" LINDY RINGED GROUND "ENTRANCE"
TRY 3/16 WITH SAME AIR FOL SHAPED
TAPER BLANK BEFORE SHAPING AIR FOL

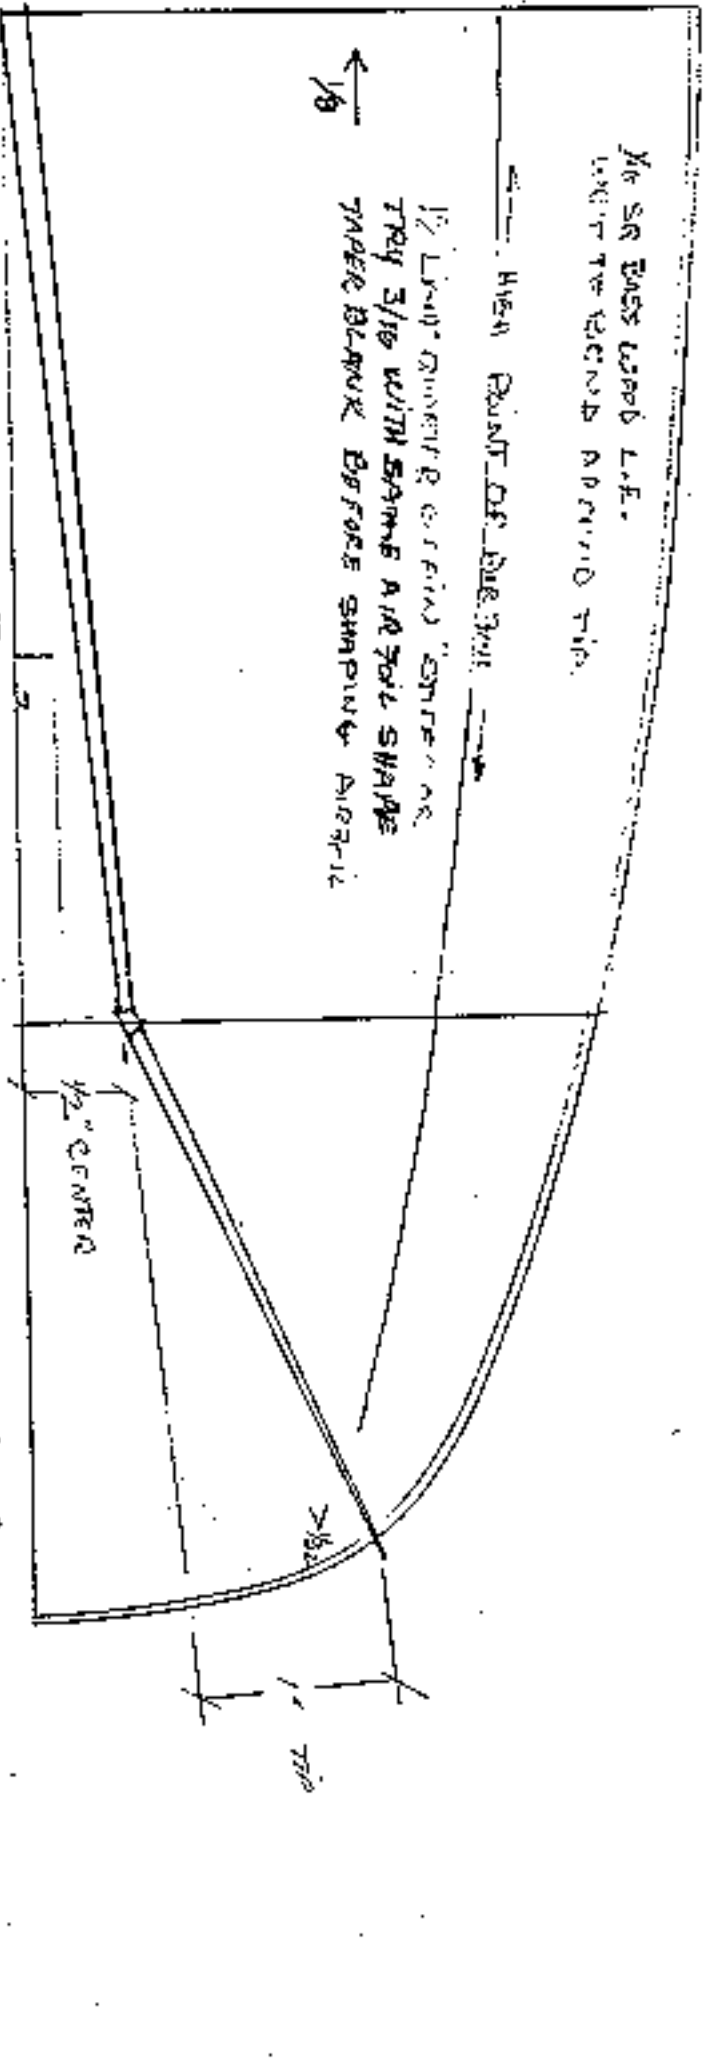

DRIFFTER

By Bob De Shields
OUT DOOR CATA PULT GLIDER


WASHING TAG OTHER WINDING
"LEFT SIDE" BEHIND ABOUT 1/2"

1/2" OR 1/16 LIGHT
SAND TO AIRFOIL SHAPE

ALSO (WIND) MAKE GOOD TURNING ALL G. WITH A FINNER
NEXT "DI" you may try a DEP UD WINDS OR WIDE USE A
FLAP ON THE SIDE OF THE FUSE UNDER THE WIND. OR BUILD A
LOT OF GLIDERS!

HAVE FUN! WITH THE
THERMAL SOARS

Bob De Shields

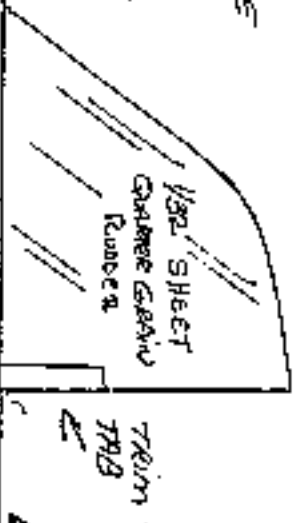

1/2" SHEET
CANTER BOARD
Rounded

TRIM
TRIM

COVER BOTH
SIDES WITH
100 GRIT
SAND PAPER

FUSE. 1/8 X 5/8 SQUARE "TAPER TO 3/162 ATTACH"
ROUND OFF ON STRIPPY IN T SHAPE AFTER WINDS HIT TO SAVE WEIGHT.

1/8" X 5/8"